

8. Setting the Thermostat

Device No	Function	Valves	Definition	Default Value
d01	Heating Control	0	PWM	0
		1	On-Off: 0,5 °C (±0,25 °C)	
d02	Room temp offset	-3,0 °C to +3,0 °C	Offset room temp measuring error (in 0,5 °C)	0,0 °C
		1	On-Off: 0,5 °C (±0,25 °C)	
d05	Cooling Control	2	On-Off: 0,5 °C (±0,5 °C)	2
		2	On-Off: 0,5 °C (±0,5 °C)	
d07	Valve Protection	0	Disable	1
		1	Enable	
d08	Frost Setpoint	5,0-17,0 °C		5,0 °C
d12	Max. Heating Setpoint	5,0-35,0 °C		35,0 °C
d13	Min. Cooling Setpoint	5,0-40,0 °C		5,0 °C
d18	Heating/Cooling Mode	0	No Connection	0
		1	Connection	
d19	Cooling Blocked	0	Cooling Allowed	0
		1	Cooling Disabled	
d20	Selecting the number of actuators	0	1 to 5 actuators loading	0

9. Setting the Thermostat





Note: The d20 will help you to reduce the power outlet on the thermostat.

Setting the hysteresis

You can set the hysteresis by entering the Installer Mode, accessing d01 and after that selecting the desired value (PWM / 0,5 °C / 1,0 °C). If your device controls the UFH we recommend to use the PWM algorithm.

Heating and Cooling Selection

Manually

This mode will be indicated by the flashing icons  . Press  or  to change between modes.

Auto

The CO terminal needs to be connected using the same phase as the power supply. After that the heating and cooling functions will be done automatically. In Installer Mode, d18 has to be set on 1 (default is 0), when CO wire is connected.

10. Setting the Thermostat

Cooling blocked

When the thermostat is set on Cooling Disabled (d19-->1) it will block the cooling function for single rooms until the device receives the heating command. During the periods of Cooling Blocked no special indicator will be displayed on the LCD screen. Cooling mode indicator will also be turned off.

Protection

When room temperature is over the limit of 36°C, all heating outputs will be turned off regardless of the control pattern and delay timers. When room temperature is under the limit of 4°C, all cooling outputs will be turned off regardless of the control pattern and delay timers.

11. Factory Reset




Press the indicated keys together for 3 seconds.



Select P47 if you want to reset to factory settings.



Press  to confirm.



Press  to confirm.



Note: In order to quickly reach 47 you can hold down key. The display will fast forward in steps of 5.

12. Heating/Cooling Mode



Heating Mode



Cooling Mode



Temperature Mode	Heating	Cooling
Sunny	20,0 °C	20,0 °C
Moon	17,0 °C	26,0 °C
Frost (heat system)	5 °C	-- °C

13. Temperature Offset (Temperature Calibration)



Long press in order to enter the Settings Mode.



Press  or  in order to set the Temperature Offset.



The Temperature Offset can be set at any value between -3°C and +3°C. Press OK to confirm.

14. Technical Specification

Model:	22-23002
Voltage	230 VAC, +10 %, 50/60 Hz
Operating performance	230 V: 1,8 W
Temperature setback	Adjustable
Temperature range	5°C – 35°C
Span	+/-0,5C OR +/-0,25C
Storage temperature	-20°C to +60°C
Ambient temperature	0 °C up to 45 °C
Degree of protection	IP 30
CE conformity according to	Class II (EN60730)
Housing material	PC, V2
Color	RAL 9010 pure white
Connection	Screw terminal
Weight	125 g net / 170 g gross
Puls-wide-modulation (PWM)	Yes
Profile Modes	3 (Sun, Moon, Automatic)
Heating and Cooling	Yes, automatically Change Over on the Wiring Centre
Parameter adjustment	Yes, in Installer Mode
Dimensions	85mm*85mm*25mm

Warranty

Multipipe warrants that this product (22-23002) will be free from any defect in materials or workmanship, and shall perform in accordance with its specification, for a period of five years from the date of installation. Multipipe sole liability for breach of this warranty will be (at its option) to repair or replace the defective product.

Customer Name:

Customer Address:

Post Code:

Tel No: Email:

Engineers Company:

Tel No: Email:

Installation Date:

Engineers Name:

Engineers Signature:

www.multipipe.co.uk

E: technical@multipipe.co.uk

T: 01245 850799

Technical

E: sales@multipipe.co.uk

T: 01245 227630

Sales

Chelmsford, Essex, CM3 6SQ

Stow Maries

Lower Burnham Road

Unit 12 Great Hayes Business Park

Multipipe Ltd

MULTIPIPE

DIGITAL 230 V

THERMOSTAT

Model: 22-23002



INSTALLER MANUAL

Contents of the box

Icons used in this manual:

-  Safety
-  Important info
-  Your benefit

Manual Contents:

Box Contents
Introduction
Product Compliance and Safety Information
Installation
User Interface
Status/LED indication
Installers notes
Warranty

Product Description

Thank you for purchasing the MuliPIPE 22-23002 Thermostat. This thermostat is a device that lets you customise the heating and cooling of your home as needed.

The 22-23002 device from MuliPIPE is a stylish and accurate digital room thermostat that is fitted with a large easy to read LCD screen and one touch buttons. You can now simply adjust your home temperature as desired in order to create a comfortable home environment.

We hope you enjoy our product.



Thermostat



Fixing Screws

1 x Installer Manual

Product Compliance & Safety Information

Product Compliance

MuliPIPE hereby declares that the product complies with the essential requirements of the following EC Directives: 2014/30/EU, 2014/35/EU and 2011/65/EU.

Safety Information

Use in compliance with safety regulations. The unit is to be used for the control of room temperature inside the house.

Installation

This accessory must be fitted by a competent person, and installation must comply with the guidance, standards and regulations applicable to the city, country or state where the product is installed. Failure to comply with the relevant standards could lead to prosecution.

Note: All electrical installation work should be carried out by a suitable qualified electrician or other competent person.

1. Mounting the Thermostat

Install the 22-23002 digital room thermostat at roughly 1.5m above floor level. It should be mounted in a location where the thermostat is easily accessible and away from direct sunlight. You can mount the thermostat directly on the wall or you can install it on top of a wall-box.



Gently remove front housing and make the wiring connections.




Wall mounting








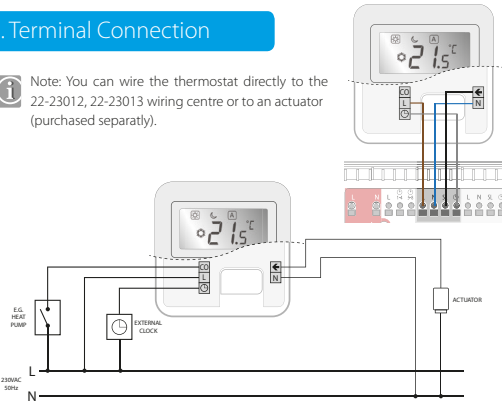



For wall mounting, mark the correct position on the wall and mount the rear case to the wall.

2. Terminal Connection





Note: You can wire the thermostat directly to the 22-23012, 22-23013 wiring centre or to an actuator (purchased separately).





3. Thermostat Icons



	BOX means to select mode. e.g.  means Hi temp is selected  means the Hi temp is not selected.
	Sunny: Hi comfortable temperature
	Moon: Low comfortable temperature
	Indicates AUTO ON or AUTO OFF
	Frost Protection Indicator: Frost protection is active, not available in cooling mode.
	Temporary override indicator: If the set temperature is changed when in program mode, the hand will appear until the next programs starting time.
	Heat Mode indicator: Indicates heating is running
	Cool Mode indicator: The icon is flashing when cooling mode active
	Temperature indicator • Display the room temperature • Display the set temp

4. Button Functions


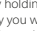
	Mode selection. Long press to return home without saving.
	OK key. Short press to confirm selection. Long press to save and return home. Long press to enter Temperature offset Heat/Cool.
 OR 	Decrease or increase Setpoint Temperature.

Note: You can change the Modes by tapping  or  and position the box on the desired one.





In Auto Mode by tapping the  or  key you can view the Setpoint Temperature.





In Auto Mode by holding the  or  key you will access Manual Override Mode.

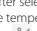

After selecting the temperature press  and the  will appear.

Note: In Auto Mode the change in Manual Override Mode is temporary. This is indicated by the  icon. When used as a stand alone, the change is permanent.



In Sunny/ Moon/ Frost Mode by tapping the  or  key you will access Manual Override Mode.



In Sunny/ Moon/ Frost Mode the change will be permanent.



When Auto Mode is selected again the permanent override will end.

7. Installer Mode



Press the indicated keys together for 3 seconds.



Select P49 if you want to enter Installer Mode.





Press  to confirm.


Note: LCD backlight is activated by pressing any key.

5. Frostschutz





Move the box by tapping  or  on the Frost Mode Indicator The device will enter in Frost Mode.



Press the  or  key to set the temperature.



In Frost Mode you can select a temperature between 5°-17°C.

Note: During the set-up, press  at any time to return to the previous screen or long press  to return to Home display.





6. Night Setback Function (NSB)

NSB Mode depends on the NSB wired connection.





0V=NSB OFF
230V=NSB ON

This function will be activated only when the device is running in Auto Mode.



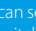If the thermostat receives a NSB signal then it will switch to . If the NSB is turned off, the unit will function in  and . You can manually set the thermostat on NSB by moving the box on the .

Note: The NSB function will be available only when you also have another device that can send a NSB signal (22-23003 thermostat, external clock, NSB switch or another clock thermostat).

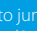Note: This function allows you to customise your thermostat as you desire. To select the device level use  to jump to the next one d1 > d2 > d5. On the desired level press  then you can choose your preferences by using  or .