

Product Compliance

This product complies with the essential requirements and other relevant provisions of Directives 2014/30/EU, 2014/35/EU, 2014/53/EU and 2011/65/EU.

These instructions apply to the Multipipe model stated above.

Warning

This product must be fitted by a competent person, and installation must comply with the guidance, standards and regulations applicable to the country or state where the product is installed. Failure to comply with the requirements of the relevant guidance, standards and regulations could lead to injury, death or prosecution.

Warning

Always isolate the AC mains supply before installing or working on any components that require 230 V AC 50Hz supply.

Warning

The earth terminals on the 22-00013 are for earth parking only. These terminals provide no earth protection.

For PDF Installation guide go to www.salus-controls.com


Installing and Connecting the 22-00013

Use the 22-00013 wireless wiring centre to simply and safely connect thermostats and corresponding thermal actuators. The 22-00013 connects to the wireless network through the UG600 universal gateway for the internet systems and through the CO10RF coordinator for the non internet systems. **One universal gateway can support up to 100 devices and one coordinator can support up to nine wiring centres, which means that if you buy more than one wiring centre, you will only need one universal gateway or one of the included coordinators. Keep the other coordinators in a safe place as spares.** Install the 22-00013 only in dry and closed interior rooms. Relative air humidity in the room may not exceed 95%. Clean the 22-00013 only with a dry and soft cloth. Do not use solvents or aggressive cleaning agents.


- 1** Remove the plastic cover. Open (and close) the four white screws with a quarter turn only. Note that screws on opposite sides turn in the opposite direction.



- 4** Cut the power and device cable to length.

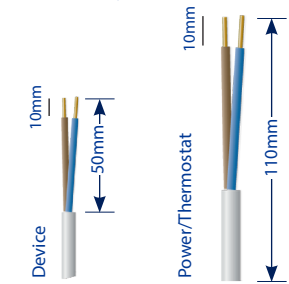

- 5** Reattach the white terminal connection board.

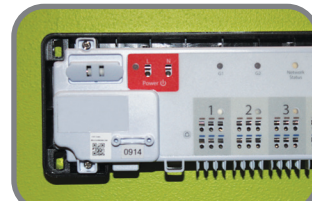

- 2** Remove the white terminal connection board.



- 6** Push the power wires into the round power holes.




- 3** Attach the back of the 22-00013 to the DIN rail or wall.




- 7** Attach the white strain-relief using the two screws to secure the power wires.




- 8** Push the thermal actuator wires into the round holes at the bottom of the 22-00013. You can connect up to three actuators in each zone.

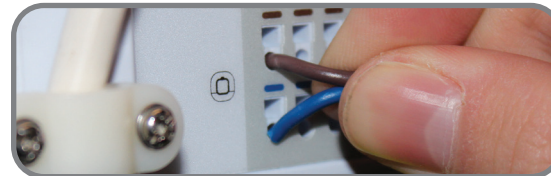

- 9** Push in the Pump wires at the bottom right of the 22-00013 for volt-free pump switching. **VOLT FREE**
For 230V connections follow the wiring diagram from the first page.

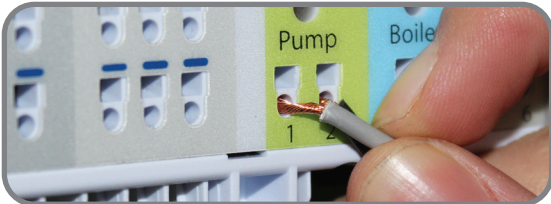


- 10** Push in the Boiler wires at the bottom right of the 22-00013 for volt-free boiler switching. When a zone calls for heat, the boiler switch closes causing the boiler to run. **VOLT FREE**

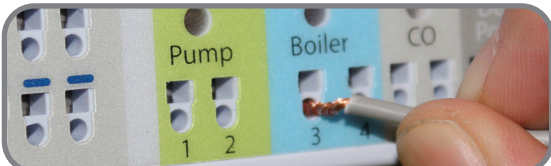


- 11** Push in the CO wires at the bottom right of the 22-00013 for volt-free heating/cooling changeover switching. An open switch is for heating (red LED). A closed switch is for cooling (blue LED). **Note:** Create the connections only for a cooling system.

- Heating mode
- Cooling mode

- 12** Push in the Dew Point wires at the bottom right of the 22-00013 for volt-free humidity sensing. **VOLT FREE**

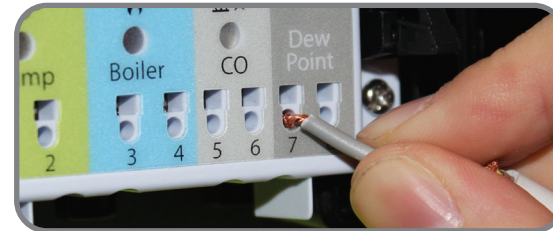


- 13** Attach the red strain-relieving strip using the three screws to secure the pump, boiler, CO, and dew point wires to the bottom side of the 22-00013.

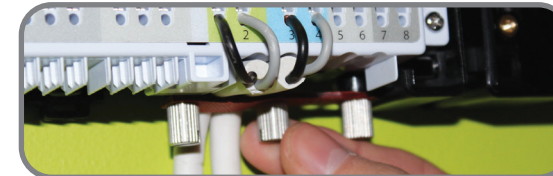

- 14** Set the boiler delay, wireless, and thermal actuator jumpers at the top right of the 22-00013.

Jumper Settings/Positions for Pump/Boiler On/Off Delay


The pump/boiler on delay and the pump off delay are fixed at 3 minutes in the software and at 0 in the terminal. The default setting for the boiler off delay is also 0 minutes, but can be changed to 15 minutes. To do this, carefully remove the jumper and re-insert it in the other position as shown below:

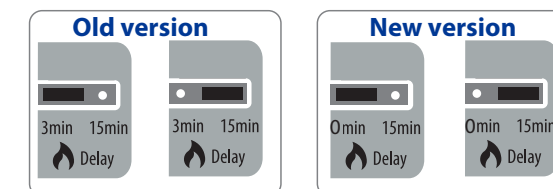

Press the Reset button to complete this action.

Antenna


The default setting for the antenna is internal (INT). To change this setting to external (EXT), carefully remove the jumper and re-insert it in the other position as shown below:

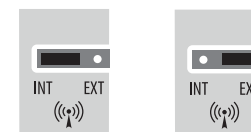

Press the Reset button to complete this action.

Type of Actuator

The default setting for the type of actuator is normally closed (NC). To change this setting to normally open (NO), carefully remove the jumper and re-insert it in the other position as shown below.

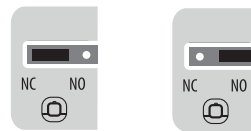


Press the Reset button to complete this action.

- 15** Make sure there is a fuse in the fuse holder.



- 16** If you set up a non internet system, plug in the CO10RF coordinator.

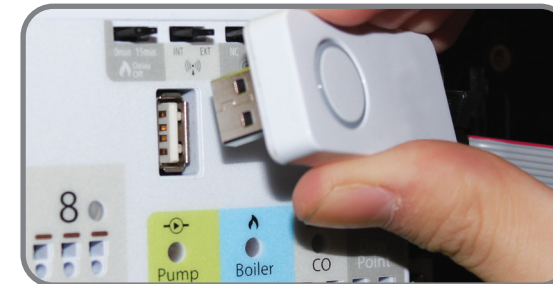

- 17** If you need to install the optional external antenna and have set the Wireless jumpers to EXT:

- Disconnect power.
- Remove the protective cap from the antenna connection on the **underside** of the 22-00013.
- Screw the antenna into the 22-00013.
- Press the Reset button to complete this action.
- Reconnect power. The 22-00013 will now use the external antenna and not the internal antenna.



- 18** Reattach the plastic cover.



- 19** Switch on mains power supply to the unit. The red LED comes on.



LED indications

Name	Colour	Meaning
Power	●	22-00013 is supplied with 230V power
G1	●	Wireless network activity on group 1 thermostats
G2	●	Wireless network activity on group 2 thermostats
Network Status	●	22-00013 is waiting to pair
	●	22-00013 is connected to the wireless network
Zone 1 actuators	●	Demand from group 1, zone 1 thermostat: actuator open
Zone 2 actuators	●	Demand from group 1, zone 2 thermostat: actuator open
Zone 3 actuators	●	Demand from group 1, zone 3 thermostat: actuator open
Zone 4 actuators	●	Demand from group 1, zone 4 thermostat: actuator open
Zone 5 actuators	●	Demand from group 2, zone 1 thermostat: actuator open
Zone 6 actuators	●	Demand from group 2, zone 2 thermostat: actuator open
Zone 7 actuators	●	Demand from group 2, zone 3 thermostat: actuator open
Zone 8 actuators	●	Demand from group 2, zone 4 thermostat: actuator open
Pump	●	Pump on
Boiler	●	Boiler on
CO	●	Heating mode
	●	Cooling mode

Coordinator

Connecting the 22-00013 (s) to the ZigBee Wireless Network

- On powering up the 22-00013, actuator LEDs will light up green then go off, then the Network Status LED flashes green.
- Press and hold the button on the coordinator for five seconds. The button flashes red to indicate the coordinator is ready to pair. The Network Status LED on the 22-00013 goes steady green when connected.
- Repeat the process for every 22-00013 in the system. Note that one coordinator can support up to nine 22-00013's.
- To identify your 22-00013 (WC) number press Pair for one second. The LED on the zone number lights green: WC-1=Zone 1, WC-3=Zone 1, 2, 3, and so on. The Network Status LED is used to identify WC-9.
- To pair your Salus thermostats, see your thermostat manual.
- Press the coordinator button for five seconds until the LED flashes steady red.

Note: To restore the 22-00013 back to factory default settings at any time, press and hold the pair button on the 22-00013 for 15 seconds. The G1 and G2 LEDs turn from flashing red to solid red then go off. After that please press the Reset button once.

Checking the System Configuration and Communication

- Press and hold the coordinator button for one second. All devices connected to the system flash. To stop checking, press and hold the coordinator button again for one second.
- Press and hold the Pair button on the WC for five seconds. All devices connected to the 22-00013 will flash. To stop checking, press and hold the Pair button again for five seconds.

Deleting all Devices from the Wireless Network

- To delete all devices connected to the network, press and hold the coordinator button for 15 seconds. The colour of the button changes from red to amber.
- To delete all devices connected to the 22-00013, press and hold the pair button on the 22-00013 for 15 seconds. The G1 and G2 LEDs turn from flashing red to solid red then go off. The final step is to press the Reset button once.

Note: After all devices have been deleted from the wireless network, they will need to be reinstalled. Refer to the instruction manuals.

Universal Gateway

Connecting the 22-00013 (s) to the ZigBee Wireless Network

- On powering up the 22-00013, actuator LEDs will light up green then go off, then the Network Status LED flashes green.
- Remove the coordinator from the 22-00013, access the SALUS SmartHome App and add your 22-00013. When in Pairing Mode, the Universal Gateway will start flashing red. The Network Status LED on the 22-00013 goes steady green when connected.
- Repeat the process for every 22-00013 in the system. Note that one Universal Gateway can support up to 100 devices (thermostats, TRVs, etc.).
- To identify your 22-00013 (WC) number press Pair for one second. The LED on the zone number lights green: WC-1=Zone 1, WC-3=Zone 1, 2, 3, and so on. The Network Status LED is used to identify WC-9.
- To pair your SALUS thermostats, see your thermostat manual.
- The Universal Gateway will turn solid blue automatically, once the pairing process is complete.

Note: To restore the 22-00013 back to factory default settings at any time, press and hold the pair button on the 22-00013 for 15 seconds. The G1 and G2 LEDs turn from flashing red to solid red then go off. After that please press the Reset button once.

Checking the System Configuration and Communication

- Go to the SALUS SmartHome App and press the Identify button. The device will start flashing. Stop the identify process by pressing the button from the App again.
- Press and hold the Pair button on the WC for five seconds. All devices connected to the 22-00013 will flash. To stop checking, press and hold the Pair button again for five seconds.

Deleting all Devices from the Wireless Network

- You can remove your devices from the SALUS SmartHome App, Equipment, All equipment menu.
- To delete all devices connected to the 22-00013, press and hold the pair button on the 22-00013 for 15 seconds. The G1 and G2 LEDs turn from flashing red to solid red then go off. The final step is to press the Reset button once.

Note: After all devices have been deleted from the wireless network, they will need to be reinstalled. Refer to the instruction manuals.